

Triumph TR7/8 Front & Rear Clips

FRONT

To fit panel remove complete bumper assembly and marker lamps.

Place replacement bumper up into position against front lip and secure with 'G' clamps.


Drill vertically through panel and metal lip under front top panel.

Secure with 10/32 bolts with Nyloc nuts and washers.

Inside the front bottom of the wheel arches secure with self tapping screws or rivets.

If you fit aftermarket marker lamps in the position indicated they will secure the corners enabling you to align them with the original panel contour.



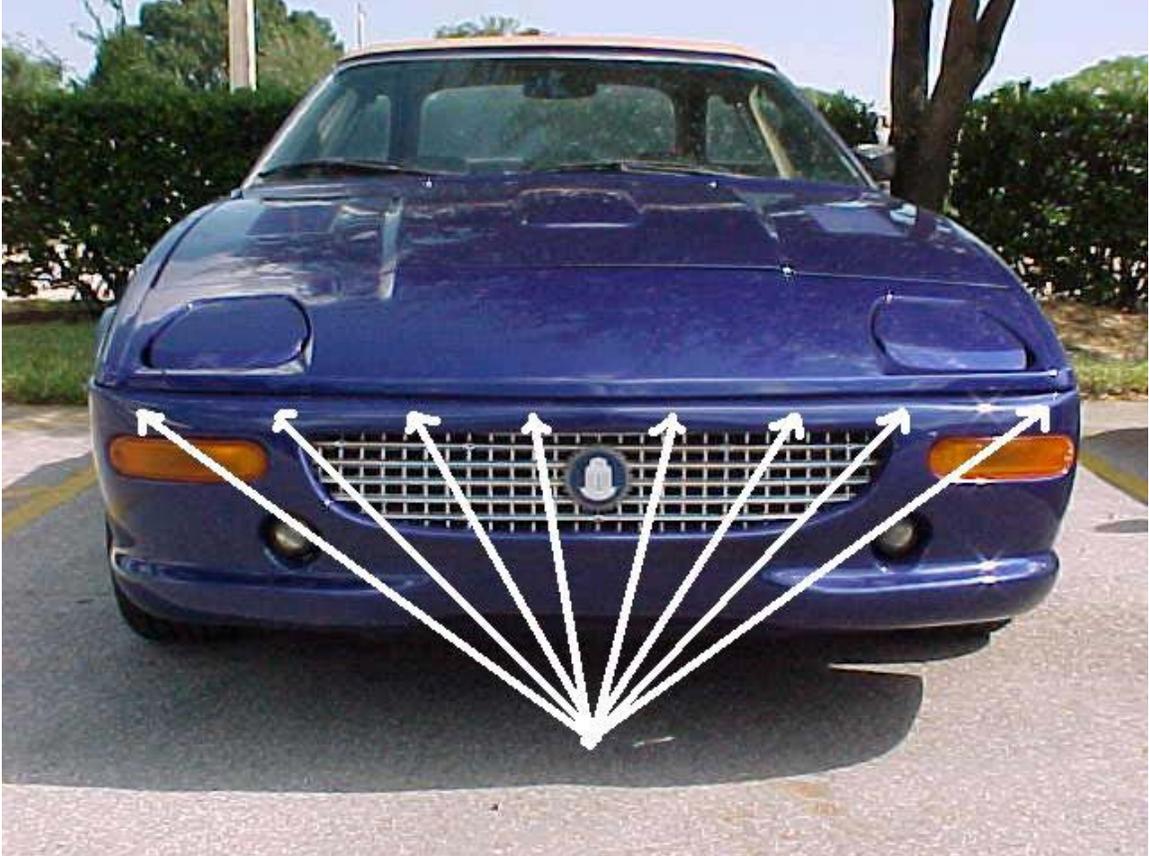

REAR

We stripped the rear bumper beam to bare metal and cut off the ends just short of the mounting thread holes.

Refit beam to vehicle.

Place a spacer on top of the beam (wood or metal) and secure.

This will allow you to raise the bumper until it brings the face of the cover up tight to the body panel and secure in position.

Fit self tapping screws or rivets along bottom edge of bumper beam and inside bottom of wheel arch.

The front turn-signal lamps are originally from Chrysler: Sebring Coupe (1995-6)

Grill: MG Midget

The Triumph badge is available from Moss Distributing in Goleta CA. Part # 408-587

